## **ReMUV Air Lateral Transfer Device**

### Always make sure Patient is Centered

Head and heels are on mat or supported

### Always make sure mat is Fully Inflated

- > Never leave patient unattended when mat is Inflated
- > There is min of two caregivers needed for each transfer

### Always use with Air Supply

- > Leave on for length of transfer and fully deflate prior to pump hose removal
- The pump has a duty cycle on the air supply. 30 secs on, 1 min OFF, 5 cycles with 30 min rest period
- > Transfers need to happened soon after full inflation and within 30 seconds to be within the duty cycle.

### Always use as Single Patient Use

- > Air Lateral Device is designed to use used multiple times on same patient during their hospital stay
- > Once device is unzipped the mat is no longer usable and is to be discarded



## **HONOR**HEALTH®

### **Air Supply Operation Instructions**

- 1.Ensure the power switch is in the off (o) position
- 2. Plug the air supply into a 120AC power outlet
- 3. Connect the air supply hose to the REMUV™ Air Mat
- 4. Turn the Power Switch at the top of the Air Supply to the on (I) position (one power output with continuous flow)
- 5. Turn the Power Switch at the top of the Air Supply to off (o) position after use
- 6. Disconnect the air supply hose from REMUV™ Air Mat
- 7. Unplug the air supply power cord from wall outlet and store.



**Password:** 

Honor

NOTE: DUTY CYCLE: 30 sec ON, 1 min OFF, 5 cycles with 30 min rest period

# HONOR HEALTH®

### **Air Supply Operation Instructions**

- 1. Ensure the power switch is in the off (o) position
- 2. Plug the air supply into a 120AC power outlet
- 3. Connect the air supply hose to the REMUV™ Air Mat
- 4. Turn the Power Switch at the top of the Air Supply to the on (I) position (one power output with continuous flow)
- 5. Turn the Power Switch at the top of the Air Supply to off (o) position after use
- 6. Disconnect the air supply hose from REMUV™ Air Mat
- 7. Unplug the air supply power cord from wall outlet and store.



Password:

Honor

NOTE: DUTY CYCLE: 30 sec ON, 1 min OFF, 5 cycles with 30 min rest period

### **ReMUV Air Lateral Transfer Device**

### Always make sure Patient is Centered

> Head and heels are on mat or supported

### Always make sure mat is Fully Inflated

- > Never leave patient unattended when mat is Inflated
- > There is min of two caregivers needed for each transfer

### Always use with Air Supply

- > Leave on for length of transfer and fully deflate prior to pump hose removal
- The pump has a duty cycle on the air supply. 30 secs on, 1 min OFF, 5 cycles with 30 min rest period
- > Transfers need to happened soon after full inflation and within 30 seconds to be within the duty cycle.

### Always use as Single Patient Use

- Air Lateral Device is designed to use used multiple times on same patient during their hospital stay
- Once device is unzipped the mat is no longer usable and is to be discarded

